

Spare Tire Kit (Optional for GearWagon AT Sport Trailer)

Designed for use in GearWagon AT Sport Trailer. Spare Tire positions inside trailer at the front of trailer base. Kit includes mounting hardware for securing Spare Tire using trailer's C-Channel track and D-Ring attachment points on front sidewall.

Factory installation available for build to orders with Let's Go Aero. Drilling of two holes required when purchased individually.

Parts List


- 1 Spring Nut, 1/4x20
- 1 D-Ring (Large Black)
- 1 Screw, 1/4 x 20
- 1 Fender Washer
- 1 Small Washer
- 2 D-Rings (Small Silver)
- 2 10-32 Phillips Head Screw
- 1 Length Adjustable Bungee Cord
- 1 Tire & Wheel Assembly, 13" Rim



Installation

Step 1: Install Mounting Hardware to C-Channel Track

- Place spring nut into C-Channel located on the front side of the trailer base. The rounded nut end permits easy inserting. Pressing down with your thumb, turn 90 degrees clockwise to align the grooves in the nut with the in-turned edges of the frame.
- Place Fender Washer on top of Spring Nut
- Place large black D-Ring on top of Fender Washer
- Place Smaller Washer on top of D-Ring
- Insert Bolt through holes and tighten

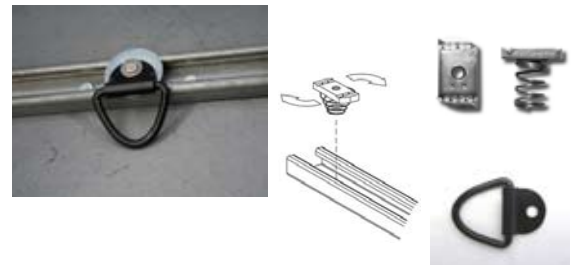

Step 2: Install small D-Rings on Trailer Sidewall

- Measure 6" from center of trailer base to each side and mark with pen. Using a 7/32 drill bit, drill screws with D-Rings into sidewall.



Step 3: Position Tire and Secure with Bungee

- Lean Tire upright against front of base as shown.
- Adjust Bungee length for fit. Run Bungee through large D-Ring and hook each end to small D-Rings as shown.

