

GearDeck™ 17 Tail Light Kit

Part No. ACC 3030

Installation

Parts Included:

Qty	Description
2	LED Lights
4	Screw Assemblies: 10-24 x 3/4 Pan Phillips Head Machine Screw #10 Flat Washers 10-24 Nylocks
6	16-14 Butt Connectors
6	8" Nylon Ties
1	Wire Harness with Four-Flat Connector
1	Plastic Convolute/Conduit

Tools Needed

13/64 Drill Bit
3/8" Wrench
Wire Stripper



Step 1: Mount LED Lights to Tray


Place LED light against tray. Using hole locations from light plate, drill two holes and secure with Screw Assemblies. Repeat on other side of tray. Be sure to install the LED light with yellow wire on the driver side and the LED light with green wire on the passenger side.

Step 2: Connect Wiring

Using butt connectors, connect Wire Harness to LED fixture's wiring, matching the yellow and green wires in the process.

Step 3: Secure Wiring Underneath Carrier

Working back from the four-flat connector, wrap the plastic convolute around the wire harness. Route wiring underneath the carrier's TwinTube platform as shown in diagram and secure with zip ties.

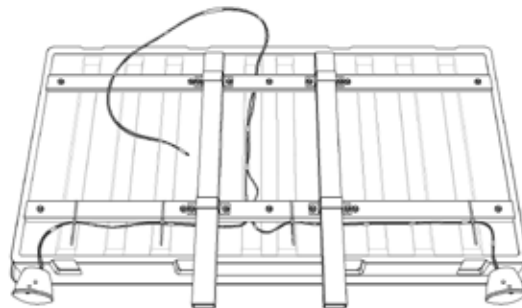

Operation

Connect wire harness's four-flat connector to your vehicle's wire harness connector. Check to be sure tail lights (stop, turn, tail) and wiring is operating properly before transit.

For assistance, contact Let's Go Aero at 877-464-2376 or 719-630-3800, or Support@LetsGoAero.com. Visit our website at www.LetsGoAero.com

LET'S GO AERO
Gear Management Solutions™