

LittleBig Tarp Installation & Operation

The LittleBig Tarp™ is custom fit for the 7' LittleGiant Trailer by Let's Go Aero, and is the first ever designed with expandability. Patents pending.

Installation

Parts Included:

Qty	Description
1	LittleBig Tarp
3	Battens
11	Metal O-Rings with Loom Clamps
3	10-32 Phillips Head Screws with
6	Washers
3	Nyloc Nuts
11	Self Tapping Fasteners
11	External Tooth Washers
2	Quick Links (pre-installed on rear, corner straps)
2	Loom Clamps (for install on quick links)
1	Loom Clamp (pre-installed on rear, center strap)
2	S Hooks (pre-installed)



Step 1: Position LittleBig Tarp

Lay LittleBig Tarp over LittleGiant Trailer, without Battens. From front of trailer, seams should fit to front of endgate.

Step 2: Attach Front Endgate O-Rings and Hardware

Engage (3) O-Rings with the 3 front tonneau clips on the tarp. Tension LittleBig Tarp slightly. Mark holes for (3) 10-32 Phillips Head Screws on the front endgate. Drill (3) 3/16" holes at marked locations.


Attach loom clamps on O-Rings to front endgate using the (3) 10-32 Phillips Head Screws, (6) washers, and (3) Nyloc nuts. Reattach O-Rings to tonneau clip

To operate the clip, grab where notched and pull upward to open clip. This motion enables the O-Ring to pass through the clip.



Step 3: Insert Battens

Insert Battens, evenly separated. Batten ends are inserted into the C Channel located along the top of the trailers sidewalls.

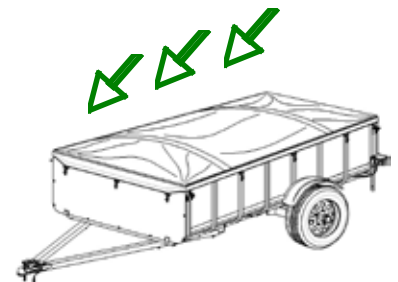

For assistance, contact Let's Go Aero at 877-464-2376 or 719-630-3800, or Support@LetsGoAero.com. Visit our website at www.LetsGoAero.com



LittleBig Tarp Installation & Operation

Step 4: Attach O-Rings to Sides of Trailer

Align seam of LittleBig Tarp to outside of C-Channel on one side of the trailer. Engage (3) O-Rings to tonneau clips on side of trailer and mark U-Tubes 3,5, and 7 through the O-Ring's loom clamp holes. Undo O-Rings from tonneau clips and secure using (3) Self-Tapping Fasteners, (3) External Tooth Washers, and a drill with a Phillips-Head bit. Repeat on the other side of the trailer.



Step 6: Attach O-Rings on Inside of Trailer

Unzip LittleBig Tarp at the rear endgate about 12 inches. Mount loom clamp of O-Ring on #7 U-Tube on the inside of the trailer, 1 inch down from the C-Channel using (1) Self Tapping Fastener and (1) External Tooth Washer. Repeat on the other side of the trailer.

Step 7: Adjust Side Tensioning Straps



Attach S Hook on each side tensioning strap to an inside O-Ring and pull tight, tensioning tarp.



Step 8: Attach LittleBig Tarp to Rear Endgate

Attach Loom Clamps to the two Quick Links located on two of the three rear straps (the third strap, at rear center, has been pre-installed). Undo the clips on the straps.

Attach Loom Clamps to trailer, using remaining (3) Self Tapping Fasteners and (3) External Tooth Washers, one at the bottom center of the #8 U-Tube on the outside, and one each at the two midpoints of the radius of the outside apex of the #8 U-Tube.

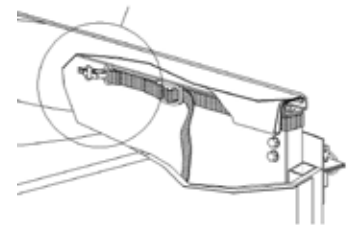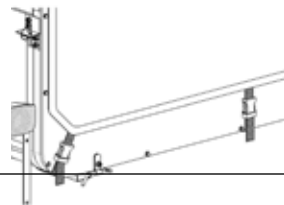

Reattach strap clips and tighten to fit.

Operation

- * The battens provide the LittleBig Tarp with structural support and tension. The cover should be installed for a sturdy fit in unexpanded form.
- * To release the cover from its clips along the sidewalls, it is helpful to utilize the zippers in the process.
- * To expand the cover, unzip along sidewalls. The battens may be relocated along the C-Channel track or removed.
- * **Do not stretch the cover. Utilize within the parameters of its expandability.**



WARRANTY: Limited 6 month warranty from manufacturer defect on soft goods including the LittleBig Tarp.

LET'S GO AERO
Gear Management Solutions™